



STI-6400 Exit Stopper Reset Instructions

- 1) Turn the unit off and disable all power to the unit by removing the battery. If you have used the 12-24 connection option, then please ensure this is disconnected from your power source.
- 2) Reset all the internal “Dip” switches to their factory defaults using the below chart. (Greyed boxes are the factory settings)

SWITCH SETTINGS	1	2	3	4	5	6	7	8
Arming - immediate	OFF*							
Arming - 15 second delay	ON							
Trip - immediate		OFF*						
Trip - 15 second delay		ON						
Shut-off based on duration (switches 4 & 5)			OFF*					
Shut-off approx. 3 sec. after door closes			ON					
Duration - 30 second alarm				OFF*	OFF*			
Duration - 180 second alarm				OFF	ON			
Duration - continuous alarm				ON	OFF			
Duration - annunciator mode				ON	ON			
Low battery detection ON						OFF*		
Low battery detection OFF						ON		
Volume - High							ON*	
Volume - Low							OFF*	
Relay Function OFF								OFF*
Relay Function ON								ON

- 3) Before turning the unit back on, ensure the two reed switches (small, rectangular, red magnets) are in very close proximity.
- 4) Restore the power and turn the unit back on.

Note: If you wish to change any of the switches, please follow step 1, then change them in step 2. Afterwards, ensure you follow steps 3 & 4 accordingly. This process must be performed any time the unit requires alteration.