

Fitting Instructions for CB Door Alarms

Models 130

Suitable for wood and aluminium doors and frames. **NOT** suitable for use on steel or magnetic doors or frames.

Use RH Model when door hinges are on right side of the door viewed from the inside.
Use LH Model when door hinges are on left side of the door viewed from the inside.
Both above when viewed with door opening away from you.

Installation

Mark the position where the alarm unit will be fixed. The unit should be positioned as near to the door edge as practical.

Remove the mounting plate by unscrewing the two 4mm screws. Screw the mounting plate to the door using the 10 x 1" roundhead screws provided. Fit the battery provided and re-assemble the unit to the mounting plate by engaging the location peg on the inside of the body with the hole in the rear flange of the mounting plate and replacing the two 4mm screws.

Fit the magnet keep by recessing the tongue into the door frame and securing with the 10 x 1" countersunk head screws provided.

THE RELATIVE POSITION OF THE MAGNET KEEP WITH THE ALARM UNIT IS MOST IMPORTANT. THE PROFILE OF THE MAGNET KEEP SHOULD BE IN LINE WITH THE PROFILE OF THE ALARM UNIT. IT IS ESSENTIAL THAT THE BLACK ROUND INSERTS (one in each unit) BE OPPOSITE EACH OTHER AND **NOT MORE THAN 5/16"** (8mm) APART WHEN THE DOOR IS IN THE CLOSED POSITION.

In applications when the fitting of the magnet keep is inappropriate remove the magnet from the keep and insert the magnet into the door frame and screw in place opposite the black round insert in the alarm unit. Use two stainless steel screws.

THE MAGNET MUST BE SCREWED INTO THE DOOR FRAME IN THE SAME RELATIVE POSITION TO THE ALARM UNIT AS IF IT WERE IN THE KEEP.

The Emergency Bolt Company Ltd

Unit 6, Vennland Business Park, Mart Road, Minehead, TA24 5DX, UK

Tel: 01643 709591 Fax: 01643 708504